

User Cleaning Instructions

1 Daily cleaning with the cleaning program


Open the door, activate the door switch with the key **A** to restart the machine.
Please wait until the machine is ready.
Press the program - button **B** inside the lid.
The display **C** shows:

1 = PROGR
3 = FREE

2 = DATI 4 = CLEAN
5 = MAINT.

To clean press button 4
on the keyboard **D**

CLEANING
SEL 1 - 2 - 3

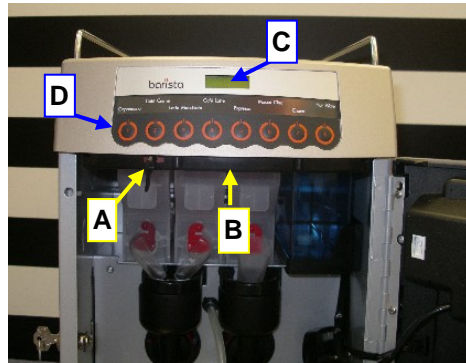

SEL 1: Cleaning the mixer body 1 / Topping & Chocolate

SEL 2: Cleaning the mixer body 2 / Coffee

SEL 3: Cleaning the mixer body 3 / hot water

ATTENTION: Put a container under the output unit whilst using the cleaning program


2 Cleaning the mixer body

To remove the mixer body push the red bayonet lock to the left side **1**.
Clean the mixer body, tube and the nooks under flowing warm water. You can also use a dishwasher.



3 Cleaning the drip tray

Press the drip tray down and push it forward.
Lift up the cap and clean both parts under flowing warm water.
You can also use a dishwasher.

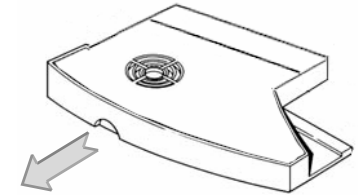


4 Trouble shooting / error messages

If the display shows "NO WATER OFF 6A", refill water (if the machine has a built in tank) and press button 1 on the keyboard **D**.

No Product:

- refill the product container
- set the lock **2** in the right position
- set the containers in the right position

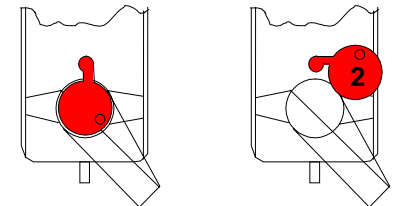

5 Monthly Clean

As well as the daily clean, items 1 – 3, all product containers must be removed emptied and cleaned. The inside surfaces of the machine must be wiped clean. You can also use a dishwasher.

ATTENTION: The product containers and components must be completely dry before any product is put in them.