

## 1. daily cleaning with the cleaning program


Open the machines door, activate the door switch (A) with the key.  
Wait until the machine initialises and is ready. Press the program button (B) under the lid.  
The display alternately shows:

1=PROGR  
3=FREE

2=DATA 4=CLEAN  
5=MAINT

To clean press **button 4** on the selection keypad.  
The display then shows:

CLEANING  
SEL 1-2-3

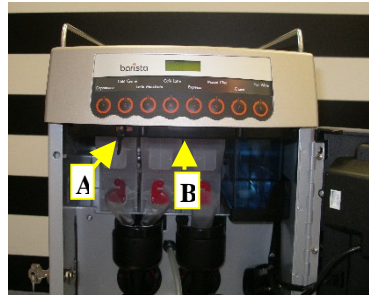

**ATTENTION:** Place a container under the dispense outlets.


To carry out the cleaning program press each of the selection buttons as follows:

### Button 1: Brewer cleaning.

Initially the brewer will automatically cycle and rinse with clean water.  
Press **Button 8** When the display shows “Put pastille then P8”  
After about **3 minutes** the brewer will automatically cycle and rinse again.

### Brewer cleaning with a cleaning tablet.

On a weekly basis it is recommended that a brewer cleaning tablet is used:  
Follow the same procedure above except Insert a cleaning tablet into the brewer as shown when the display shows “Put pastille then P8”  
Now press **Button 8**

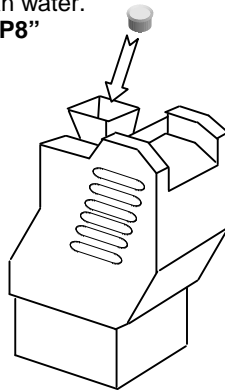


**Button 2:** When pressed clean water will flush through the mixer bowl. Press 2 or 3 times until the water runs clear.

**Button 3:** When pressed clean water will flush through the hot water outlet.

Remove the door switch key and close the door to put the machine into normal operating mode after cleaning.

## 2. removing and cleaning the drip tray


Lift the drip tray and pull it forwards.  
Remove the top and clean both parts under flowing warm water. Use a mild detergent and cloth or soft brush if necessary

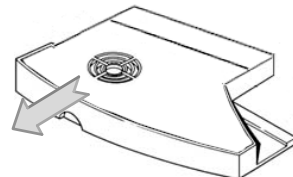

The parts can be cleaned in a dishwasher.

## 3. removing and cleaning the coffee grounds container

The Grounds bin will be full after approx. every 50 drinks.  
Pull the coffee grounds container forward empty contents into a waste bin and clean it under flowing warm water. Use a mild detergent and cloth or soft brush if necessary

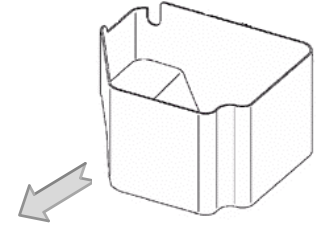

## 4. removing and cleaning the mixer body

To remove the mixer body push the red bayonet lock to the Left.  
Clean the mixer body, tube under flowing warm water. Use a mild detergent and cloth or soft brush if necessary




This part can be cleaned in a dishwasher

## 5. removing and cleaning the water tank (where fitted)

Lift the water tank up and pull it forward.  
If there is scale then clean using a suitable scale remover.  
rinse the tank thoroughly with clean water before use.

The water filter (F) must be changed monthly.

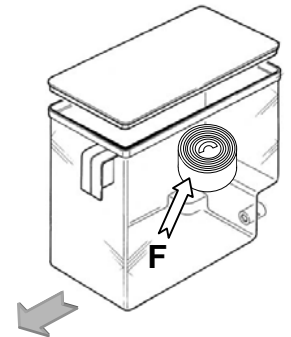

## 6. monthly clean

As well as the daily clean, all product containers should be removed emptied and cleaned. The parts can be cleaned in a dishwasher.

**ATTENTION:** The product containers and components must be completely dry before any product is put in them.

Remove the extraction tray from above the mixer bowl and dispose of any contents, and clean.

All inside surfaces at the front of the machine must be wiped clean.