MINI MAGNUM INSTRUCTIONS

Open Door

Press Flush Audit Program (Red Button) 4 times Display will now say

SET TEMPERATURE

PROGRAM DRINKS

LOAD DEFAULTS

Press program. Display will show all available options
Press the drink you wish to program i.e. white coffee
The display will high light the following:COFFEE

COLLED

WHITENER

WATER

The coffee light will be flashing

Use UP/DOWN buttons to increase or decrease coffee


Repeat for whitener and water

The gram throw and water volume will be shown bottom right on the display


Move to next drink and repeat sequence

When finished either press EXIT or TEST DRINK


The ACTIVE button will always be the only button flashing

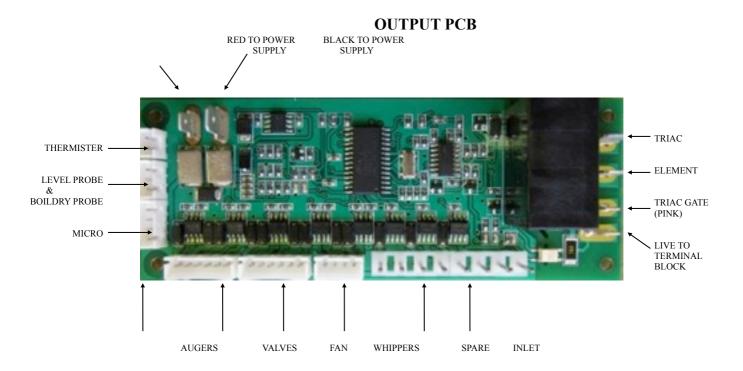

100-12 SWITCHING POWER SUPPLY

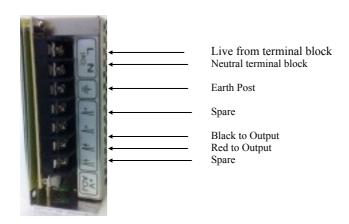

WHIPPER BOWL ASSEMBLY

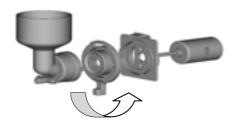

Turn anti-clockwise to unlock

The whipping assembly on this machine is of an improved type, a diagram of which is shown above. The system provides both an improved drink quality and a better construction method to allow for easier maintenance and cleaning.

Hygiene is an important part of the operation of the machine, all ingredient / water contact parts should be cleaned regularly and if components are in a poor condition, they should be replaced immediately.

ERROR CODES

Fault codes are shown on the display by the word 'Fault codes' followed by a 2 digit number.

Once a fault code is shown, the machine will no longer function until it is turned off and back on again.

Error No. Meaning

01 Power board failure Thermistor open circuit 02 03 Thermistor short circuit 04 Overfill probe 05 Boil dry active 06 Scale build up 07 The element has failed Reserved 08..10 11 The Cappuccino button is stuck in 12 The Café Latte button is stuck in 13 The White coffee button is stuck in 14 The Black coffee button is stuck in The Espresso button is stuck in 15 16 The Mocha button is stuck in 17 The Chocomilk button is stuck in 18 The Chocolate button is stuck in 19 The Hot water button is stuck in 20 The Top-Up button is stuck in 21 The Large button is stuck in 22 The Strong button is stuck in 22..29 Unused 30 The program button is stuck in

ELECTRONICS

ELECTRONI	ICS	
ITEM	PART NO.	DESCRIPTION
1	K03-005	OUTPUT PCB
2	K03-001	LCD DISPLAY PCB
3	K03-004	SWITCHING POWER SUPPLY
4	K01-412	TRIAC 3KW
5	R01-025/1	TERMINAL BLOCK
6	K01-407	PROGRAM PUSH BUTTON
7	K03-002	CUP STATION LIGHT
8	K03-003	CUP STATION LIGHT LENS
	WATER & DISPENSING	
9	T01-403	BOILER ASSEMBLEY LESS VALVES (ITEMS 10-19)
10	T01-401	BOILER BODY
11	T01-402	BOILER TOP
12	A01-012	BOILER GASKET
13	H01-001	ELEMENT 3KW
14	T02-003	ELEMENT WASHER x 2
15	S01-005/1	LEVEL PROBE
16	S01-003/1	OVERFLOW PROBE
17	K02-013	THERMISTER
18	B04-001	VALVE BOOT
19	B04-005	DISPENSE VALVE 12v
20	A01-001	INLET VALVE
21	W01-012	PUMP 12v
22	W01-012	WATER CARRIER 10LTR
23	O01-003	AUGER MOTOR 12v
24	O01-003/1	AUGER DRIVE PINION
25	B01-020	CANNISTER WITH WHEEL
26	B01-021	CANNISTER NO WHEEL
27	B01-015	CANNISTER CHOCOLATE WITH WHEEL
28	B01-013	ELBOW STRAIGHT (COFFEE)
29	B01-008	ELBOW L/H (MILK)
30	B01-019	ELBOW R/H (CHOCOLATE)
31	B01-037	CANNISTER DRIVE
32	B01-038	CANNISTER AUGER
33	B01-012	CANNISTER WHEEL (MILK)
34	B01-042	CANNISTER WHEEL (CHOCOLATE)
35	B01-005	WHIPPER STEAM TRAP SEAL
36	B01-004	WHIPPER STEAM TRAP
37	B01-006	WHIPPER BOWL ADAPTOR
38	B01-026	WHIPPER MIXING BOWL
39	B01-025	WHIPPER IMPELLOR BLADE
40	B01-024	WHIPPER BASE & SEAL
41	B01-007/2	WHIPPER SHAFT SEAL
42	B01-007/3	WHIPPER BASE O-RING
43	B01-028	WHIPPER PIPETTE
44	B01-022	WHIPPER SLINGER WASHER
45	B01-023	WHIPPER MOTOR 12V
46	B01-029	WHIPPER MOUNTING
47	T02-002	SILICON TUBE (Per Metre)
48	E01-001	DISPENSE NOZZLE
49	G01-001	ELBOW (BREATHER)
	AIR EXTRACTION	
50	J01-018	EXTRACTION DUCT
51	R01-002	EXTRACTION HOSE
52	B03-001	FAN 12v
53	J01-001	FAN BOX
	CABLES	
54	A01-003	MAINS CABLE WITH PLUG
-		

55	K03-012	LOOM SET	
56	K02-016	MICRO LEAD (Door to back board)	
57	H02-006	STRAIN RELIEF BUSH	
	CHASSIS		
58	T03-004	CHASSIS COMPLETE	
59	J03-005	DOOR	
60	J02-002	FRONT BASE	
61	J01-017	DRIP TRAY (incl grill)	
62	T01-119	LOCK & KEYS Incl cam	
63	T01-120	KEYS 92276 (Per pair)	
64	R01-026	FEET (Each)	
65	L03-016	SIDE OVALS (PER PR)	
66	D03-006	LEFT SIDE BUTTONS	
67	D03-007	RIGHT SIDE BUTTONS	
68	D03-008	TOP/BOTTOM BUTTONS	