

# ROBIMAT MENU QUICK GUIDE



## ● PRICING

### ● CASH PRICES

M - 1 - E PROGRAMMING MODE PRICE CASH  
 E KEY 10 (1st SELECTION) CURSOR ON PRICE  
 ENTER PRICE POUNDS / POINT / PENCE  
 E RETAINS AND MOVES TO NEXT SELECTION  
 COIN REJECT OR TIME OUT TO EXIT

### ● CARD PRICES

M - 1 - E PROGRAMMING MODE PRICE CASH  
 M PRICELIST 1  
 E PROCEED AS PER CASH PRICES  
 PRICELIST 2 ALSO AVAILABLE

## ● COOLING

M - 2 - E COOLING PROGRAM  
 EL CHILLER? SET TO 1 (ON)  
 E AUTO SET SET TO 0 (OFF)  
 E COOLING 1 NORM - ENTER MIN TEMPERATURE  
 E COOLING 1 PLU - ENTER MAX TEMPERATURE  
 E COOLING 2 ONLY FOR SLAVE MACHINES  
 M COOLING FROM MO TO MO (ALL WEEK)  
 E - E COOLING FROM 00.00  
 E - E COOLING TO 00.00 (ALL DAY)  
 E - E TEMP: CURRENT TEMPERATURE  
 STAT: SOLID SQUARE CHILLER ON  
 EMPTY SQUARE CHILLER OFF  
 DUR: PERCENTAGE CYCLE OF COMPRESSOR  
 SINCE LAST POWER ON  
 COIN REJECT OR TIME OUT TO EXIT

## ● TEST VENDS

M - 3 - E TEST SALE MODE SELECT PRODUCT  
 COIN REJECT OR TIME OUT TO EXIT

## ● STATISTICS

### ● SHORT TERM (RESETABLE)

M - 4 - E SHOW STATISTIC  
 E STATISTICS ARE DISPLAYED. STEP WITH M OR  
 AUTOMATIC SCROLL IF NO BUTTON PRESSED  
 ONLY POSITIVE STATISTICS DISPLAYED  
 LAST OPTION = DELETE STAT  
 1 - E STATISTICS DELETED  
 OR  
 0 - E STATISTICS NOT DELETED  
 COIN REJECT OR TIME OUT TO EXIT  
 STATISTICS ARE ONLY DELETED WHEN THE NEXT VEND IS MADE

### ● LONG TERM (CANNOT BE RESET)

M - 5 - E SHOW STATISTIC  
 PROCEED AS PER SHORT TERM STATISTICS

## ● TIME LOCKS

M - 6 - E HOUR CHECK / AMEND TIME  
 E - E DATE CHECK / AMEND DATE  
 E - E - E DAY OF WK CHECK / AMEND DAY OF THE WEEK  
 E ILLUMINATION SET TO 1 (ON)  
 LOCKING SET TO 0 (OFF)  
 COIN REJECT OR TIME OUT TO EXIT  
 IF A CARD READER IS FITTED THE MACHINE WILL TAKE THE DATE  
 AND TIME SETTINGS FROM THIS DEVICE

## ● INSTALLATION

### ● MACHINE

M - 7 - E INSTALLING MODE MACHINE  
 E CHECK / AMEND LANGUAGE  
 E CHECK / AMEND CURRENCY  
 E SPACE TO SALE SET TO FS40  
 E CREDIT SYSTEM SET TO MDB  
 E - E - E ENTER SECURITY CODE A  
 E ENTER SECURITY CODE B  
 COIN REJECT OR TIME OUT TO EXIT

### ● CHANGER

M - 7 - E INSTALLING MADE MACHINE  
 M CHANGER  
 E ENTER COIN MECH SETTINGS  
 E E.G. TOKEN VALUES  
 COIN DISABLE  
 TUBE LIMITS  
 COIN REJECT OR TIME OUT TO EXIT

### ● CARD READER

M - 7 - E INSTALLING MODE MACHINE  
 M - M CARD READER  
 E ENTER CARD READER SETTINGS  
 E E.G. PRICELISTS  
 REVALUE  
 MIXED PAYMENT  
 COIN REJECT OR TIME OUT TO EXIT

### ● BILL VALIDATOR

M - 7 - E INSTALLING MODE MACHINE  
 M - M - M BILL VALIDATOR  
 E ENTER NOTE READER SETTINGS  
 E.G. ESCROW FUNCTION  
 COIN REJECT OR TIME OUT TO EXIT

### ● DELIVERY / MISC

M - 7 - E INSTALLING MODE MACHINE  
 M - M - M - M DELIV / MISC  
 E PRE SELECTION TIME SET CUSTOMER PREF  
 E TIME TO DELIVERY SET CUSTOMER PREF  
 E PROMOTION RUN SET FREQUENCY MINS  
 0 = OFF  
 COIN REJECT OR TIME OUT TO EXIT

### ● OPTIONS

M - 7 - E INSTALLING MODE MACHINE  
 M - M - M - M - M OPTIONS  
 E CREDIT CONF. SET TO MAN  
 E VEND MODE SET CUSTOMER PREF  
 E MAX CREDIT SET CUSTOMER PREF  
 E MAX RETURN SET CUSTOMER PREF  
 E - M - M - M HAPPY HOUR SET CUSTOMER PREF  
 E SHOW TEMP SET TO NO  
 E - M - M - M 2 TEMP SENS SET TO NO  
 E MAGIC EYE SET TO WITHOUT  
 E STORE EMPTY SET TO NO  
 E ESCROW MOTOR SET TO WITH  
 E SHELF DETECT SET TO OFF  
 COIN REJECT OR TIME OUT TO EXIT

### ● SERVICE MENU

M - 8 - E SERVICE NO.  
 ENTER CODE (COMMON LIST OVERLEAF)  
 COIN REJECT OR TIME OUT TO EXIT