

TECHNICAL INFORMATION SHEET

No. 1008-04

Adding a hot water line to the rheavendors cino XX SM

Parts required:

- 1 x 0600016405R – Pump
- 23cm x TSIL06/09T – silicon Pipe
- 15cm x TSIL06/09T – silicon Pipe
- 1 x 0080100043 - Through panel water connector
- 1 x 0010020052 - Dispense nozzle

Procedure:

- 1) Cut the silicon hose to the correct lengths.
- 2) Attach the 23cm length of hose to the outlet nozzle of the pump supplied.
- 3) Fit the dispense nozzle to one end the 15cm hose, attach the through panel connector to the other end as shown in fig. 1
- 4) Remove both mixer bowls, turn the orange locking lever to the left to release.
- 5) Remove hole blanking plug from the panel, as shown in fig. 2
- 6) Remove the rear panel from the machine.
- 7) Lift the boiler out from the rear of the machine, it only needs to be removed halfway to get access. There is no need to detach any hoses or cables.
- 8) Remove the blanking plate in the centre pump position from the boiler lid, by turning clockwise a quarter of a turn to release, as shown in fig. 3
- 9) Fit the pump into this centre position by turning a quarter of a turn anti clockwise to lock into position.
- 10) Connect the black (-ve) and orange (+ve) leads to the newly installed pump, these leads will be cable tied up in the loom above the boiler.
- 11) Replace the boiler in the machine.
- 12) Feed the hose from the pump through the hole were the blanking plug was removed.
- 13) From the front of the machine connect the through panel connector to the hose from the pump, push and twist the connector to lock it into the panel.
- 14) Fit the dispense nozzle to the spare location on the dispense head, replace the machines rear panel.

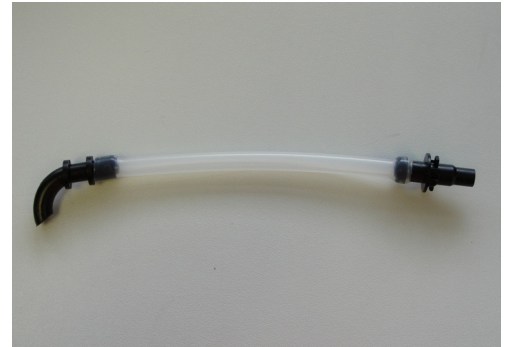


Fig. 1

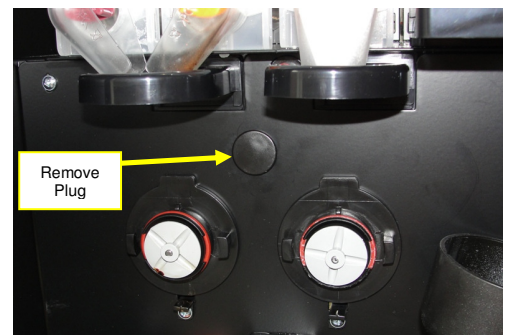


Fig. 2

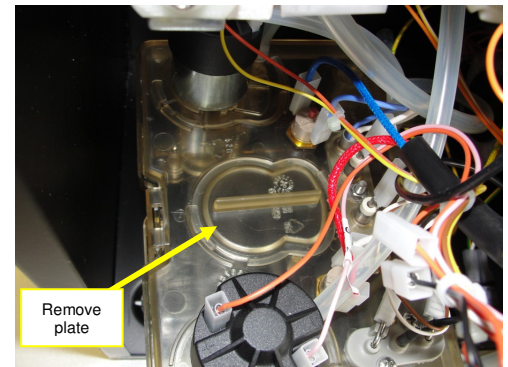


Fig. 3