


TECHNICAL INFORMATION SHEET

No. 0508-03
25-Aug-05

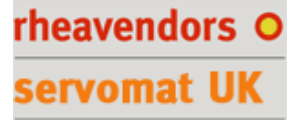

For All CINO-XS machines

Settings & Coin Inhibiting Guide for the NRI G13.mft/4 Coin Acceptor from 08/2004

On the rear of the coin acceptor are two banks of 10 DIL switches - S1.1-10 and S2.1-10, as shown in fig. 1

The first 8 switches on each bank can be used to inhibit or enable the acceptance of individual coins or tokens, switches 9 and 10 are not used for inhibiting coins. All coins and tokens are enabled as default (all switches in the OFF position)

To inhibit the acceptance of an individual coin the corresponding switches for the coin must be in the ON (upwards) position.

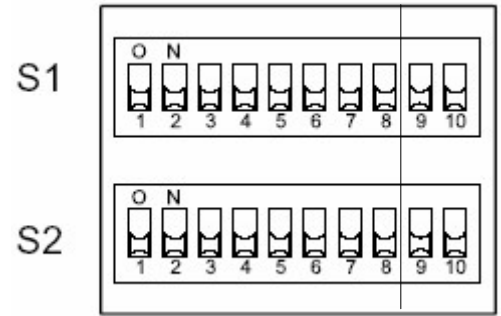


Fig. 1

The chart below shows which switch or switches are related to each coin.

	Switch Bank S1								Switch Bank S2							
	S1	S2	S3	S4	S5	S6	S7	S8	S1	S2	S3	S4	S5	S6	S7	S8
5p Accept	OFF															
10p Accept		OFF						OFF								
20p Accept			OFF						OFF							
50p Accept				OFF						OFF						
£1 Accept					OFF						OFF					
£2 Accept						OFF						OFF				
TK2200 accept							OFF									

Example: To inhibit the acceptance of the 20p coin – Both switches S1.3 and S2.1 must be in the ON (upwards) position.

TECHNICAL INFORMATION SHEET

No. 0508-03
25-Aug-05



The following functions are assigned to the last two DIL switches on the switch banks S9 and S10 on the switch banks S1 and S2:

Bank S1	OFF	ON
DIL-Switch 9	Normal-Mode	Casino-Mode
DIL-Switch 10	Block 0 active	Block 1 active

Bank S2	OFF	ON
DIL-Switch 9	Normal-Mode	Teach-Mode
DIL-Switch 10	Teach Mode Normal-Band	Teach Mode Wide-Band

A complete manual for the NRI-G13 coin acceptor is available on request.