

# Brewer Cleaning



Applies to all rheavendors Bean to Cup Machines

## 1) Remove the Drip tray

Lift and pull the drip tray forward.  
Empty any waste water and thoroughly clean.

## 2) Remove the Grounds bin

Remove by pulling forwards, right hand side first.  
Dispose of any contents and clean thoroughly.

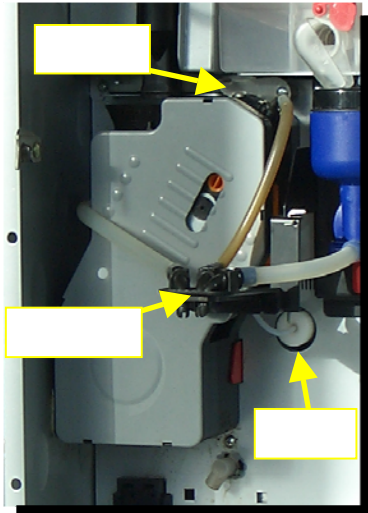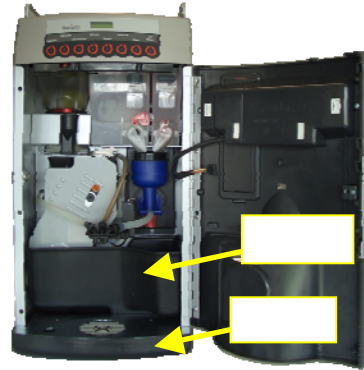

## 3) Remove the Brewer:

- Detach hot water and coffee water dispense pipes from the dispense arm.
- Remove brewer inlet pipe, this is only done up finger tight, no tools are necessary.
- Release metal latch at the top of the brewer.
- Remove the brewer by pulling the top forward first.

## 4) Clean the Brewer:

- Rotate drive shaft by hand into the lowest position, the shaft can only be turned in a clockwise direction.
- Wipe surfaces clean using a cloth and mild detergent. Rinse the brewer under hot running water. Ensure that the filter plates are both rinsed, by running water through either side of the brewer. If necessary use a soft brush to clean the hard to access areas.



## 5) Re-fit the brewer:

- Ensure the drive shaft is kept in the lowest position.
  - Whilst leaning the brewer outwards, rest the brewer on the lower Red mounting plate as shown in the photo.
  - Push the brewer up into its mounts, **Guide the brewer exactly between the two red side mounts.**
  - Secure brewer in place with the metal latch at the top.
- Re-fit the outlet pipe to the dispense arm.
  - Re-fit the brewer inlet pipe, it should be secured finger tight only.